


Care must be taken when installing Custom Glaze™. Please read the following installation instructions carefully prior to installing Custom Glaze™.

Custom Glaze™ Polycarbonate sheeting has an overlapping rib and an underlapping rib. The overlapping rib height is 30mm and the underlapping rib is 28.5mm (the effective cover is 610mm).

### Installation

1. Lay the first sheet so the first rib is dead centre on the rafter. Fix the first rib being the 30mm overlapping rib only.
2. Lay the third sheet on the fourth rafter and secure the underlapping 28.5mm rib only.
3. Insert the middle sheet and fix. Sheets will be a good, tight fit and will ensure the pans remain flat. Fix as over sheet number 1, underlap rib and fix under sheet number 3 overlapping rib (see below).
4. Continue on using this method with the next 3 sheets as this fixing method will ensure all overlapping ribs are effectively situated above the purlins.

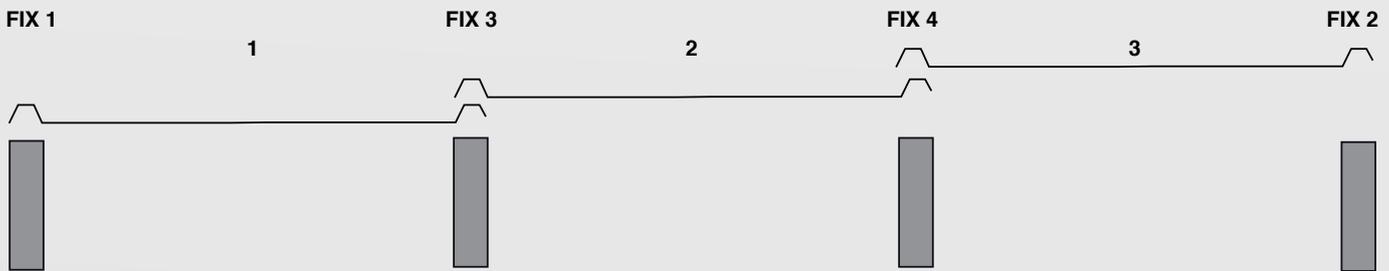

### Additional Info

In areas prone to high winds, it is possible that the pan of the sheet may chatter. Apply Noise Stop Tape on every Purlin.

Ensure the roof pitch is a minimum of 5° so that rain water can run off adequately. Sheets may sag and leak at the side laps if the pitch is insufficient.

Install Custom Glaze™ Infill Strips at eaves to avoid rain, dust and wind entering the eaves.

Custom Glaze™ will expand during daylight - the use of Custom Glaze™ Multipurpose Fasteners has a built-in hole cutter to allow for the expansion and contraction. Then, fix the screw on the crest. Do not overtighten the screw and keep it straight.

